

Open box with key




1

Take out the container



2

Replace the spray nozzle with gel nozzle

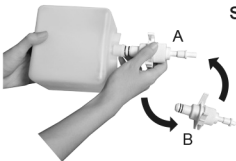

3

Put the container back into box and close it



4